ARAT Telephone Mount

Car Manufacturer: MERCEDES

TYPE: R170, SLK model

Part No: 1244

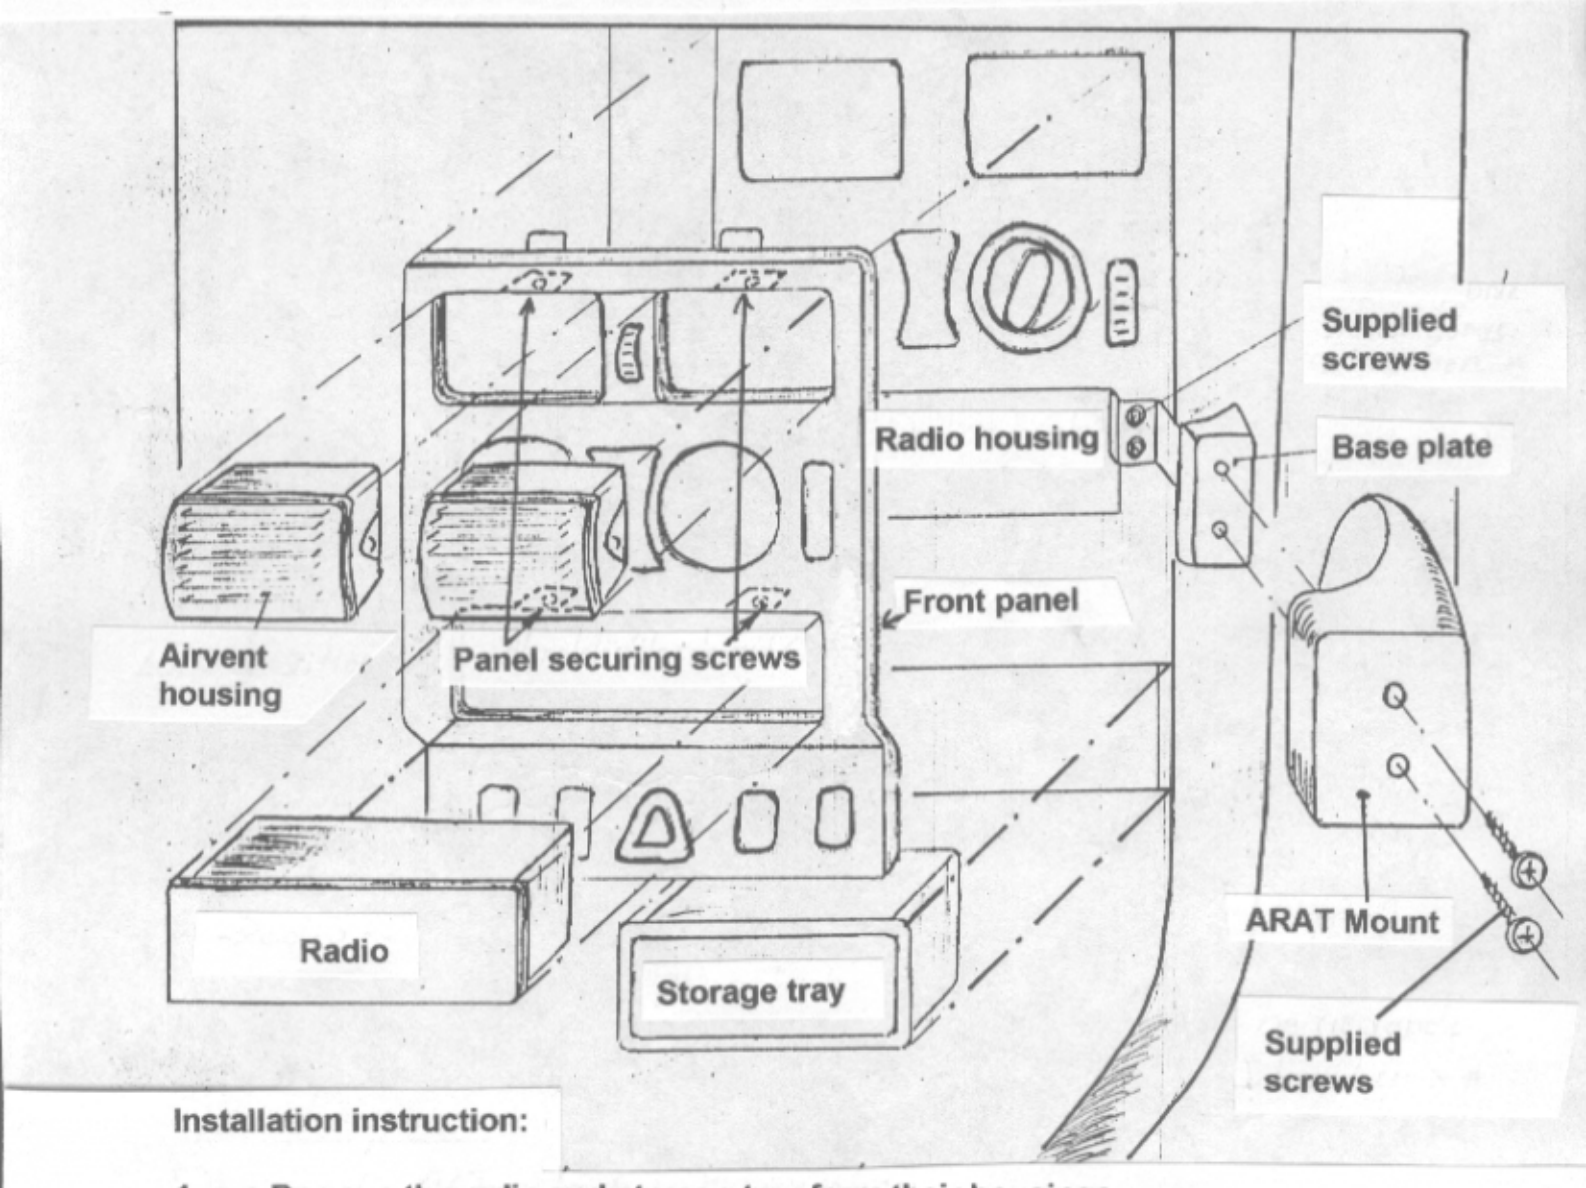

Installation instruction:

1. Remove the radio and storage tray from their housings
2. Remove the airvent asemblies (prise the vents out from either side)
3. Remove the screws (X4) from the front panel
4. Place the base securing part of the ARAT mount into place, and secure with the screws provided (pre-drill the holes)
5. Replace the front panel, airvent, storage tray and radio
6. Secure the ARAT mount to the base plate with the screws provided

NOTE: Ensure that the metal plate that lies beneath the securing face of the mount is pre-drilled to accept the telephone mounta.